Hướng dẫn đổi tên Wifi modem EP9108/ 9108W

Thao tác đổi tên wifi dễ dàng và đơn giản hơn khi sử dụng ứng dụng Hi FPT. Chi tiết

1. Đăng nhập vào modem:

Mở trình duyệt web (Chrome, Firefox, ...), nhập địa chỉ mặc định của modem <u>http://192.168.1.1</u>

User/Pass mặc định: admin/admin hoặc gọi lên tổng đài FPT Telecom



Vào Internet chọn WLAN Config

2. Đổi tên sóng Wifi

Đổi tên sóng wifi tại ô **SSID** như hình dưới. Bấm **Apply** để hoàn tất.

INTERNET	STATUS INTERNET	SECURITY APPLICAT	TION MANAGEMENT	DIAGNOSIS HELP
	WAN CONFIG PORT BINDING DHC	SERVER WLAN CONFIG R	EMOTE MGMT QOS	TIME CONFIG ROUTING
WLAN CONFIG	sble WLAN, Scanning Click 'Apply' button			
	Enabled Wireless ssid2	Enabled W	/ireless ssid3	Enabled Wireless ssid4
	SSID2: FPT-Telecom2	SSID3: FPT-Teleo	tom3 S	SID4: FPT-Telecom4
	Enable WLAN Enable	e/Disable WIFI		
	Hide SSID1			
	WLAN Client separation			
		Disabled WMM Broadcast		
	E E	Enable WMF		
	SSID: FPT-Telecom	Đối tên W	IFI	
	BSSID: FC:8B:97:76:0B:77			
	Band:	2.4GHz	•	
	Channel selection:	Auto	The current channel:	1
	802.11n/EWC:	Automatic	•	
	Bandwidth:	20MHz in Both Bands	Q	rrent Bandwidth: 20MHz
	Controlled sideband:	Lower	- Cu	rrent sideband: None
	802.11n rate:	Auto	•	
	802.11n protecting mode:	Auto	•	
	Only support 802.11n Client:	Off	-	
	54g**rate:	54 Mbps	-	
	Multicast Rate:	Auto	•	
	Basic rate:	Default	•	
	XPress™Technology:	Enabled	•	
	Transmission power:	100%	•	
	WMM:	Enabled	•	
	WMM(Quality of service):	Forbidden	•	
	WMMAPSD:	Enabled	•	
	Apply	Advanced	Click Advanced để vào mã hóa, mật khấu	phần cấu hình