Hướng dẫn đổi tên Wifi Modem TP-LINK Archer C2

1. Hình ảnh thiết bị



Đăng nhập vào modem

Đăng nhập vào trang quản lý của modem: Địa chỉ mặc định là **192.168.0.1** hoặc địa chỉ **được in ở nhãn dưới đáy modem**. Tên đăng nhập và mật khẩu đăng nhập mặc định cũng được in ở mặt dưới modem.

2. Đổi tên wifi

Lựa chọn mục **Wireless 2.4GHz → Basic Settings**: Đổi tên wifi ở ô **Wireless Network Name** Sau đó ấn **Save** để lưu cài đặt

Thực hiện thao tác tương tự đối với Wireless 5GHz.

.

Quick Setup	Wireless Settings(2.4GHz)
Network	
Dual Band Selection	Wireless Network Name: FPT telecom DEBE 2.4GH (Also called SSID)
Wireless 2.4GHz	Region: Viet Nam
- Basic Settings	Warning: Tên wifi bằng
-WPS	Please ensure to select the correct country for your current region to conform with local la tan 2.4GHz
- Wireless Security	Incorrect settings may cause interference.
- Wireless MAC Filtering	Mode: 11bgn mixed V
- Wireless Advanced	Channel: Auto Cua wifi
- Wireless Statistics	Channel Width:
Wireless 5GHz	
Guest Network	
DHCP	An Save
USB Settings	dê lưu
NAT	Save