## Hướng dẫn đổi mật khẩu Wifi modem AC1000F

Thao tác đổi mật khẩu wifi dễ dàng và đơn giản hơn khi sử dụng ứng dụng Hi FPT. Chi tiết

## 1. Đăng nhập vào modem:

Mở trình duyệt web (Chrome, Firefox, ...), nhập địa chỉ mặc định của modem: http://192.168.1.1

Account măc đinh: xem dưới đáy modem hoặc gọi lên tổng đài FPT Telecom.



## 2. Đổi mật khẩu Wifi.

Lựa chọn Network → Wireless 2.4G như hình.

- Đổi tên Wifi ở ô SSID Name
- Đặt mật khẩu Wifi ở ô Security Passphrase (độ dài mật khẩu wifi từ 8~63 ký tự)
- Khuyến cáo đặt tên, kiểu xác thực, kiểu mã hoá, mật khẩu ở cả 2 băng tầng 2.4GHz và 5GHz trùng nhau để kích hoạt tính năng Bandsteering
  Sau đó chọn Save để lưu cài đặt.
- Thao tác tương tự đối với Wireless 5G

Lưu ý: Sau khi đổi mật khẩu wifi cần xóa/ remove kết nối wifi cũ trên điện thoại/ laptop, máy tính bảng, rồi kết nối lại với tên wifi, mật khẩu wifi mới.

SSID index	1 🔻	Câu bìob mặt địab	
PerSSID Switch	Enable O Disable	Car mannage chan	
SSID Name	FPT Telecom-3CD0	Đặt tên mạng WIFI	
SSID Broadcast State	Enable	Tính năng hiến thị SSID Broadcast Enable là để bật tính năng Disable là để tắt tính năng	
Select Security Type			
Authentication Type	WPA-PSK/WPA2-PSK *		
Select Encryption Type		cau ninn mặt dinn	
Encryption Type	TKIP/AES *		
Enter security passphrase			
Security Passphrase	12345678		
		NAME OF A DESCRIPTION O	Nuclearly concerns on the
	(8~63 characters or 64 Hex	string)	Nhập password cho
(Attention: if SSID1 Name, Authe 5G Wireless are all the same, Ba	(8~63 characters or 64 Hex ntication Type, Encryption Type and Su ndsteering function will work. Otherwis	string) ecurity Passphrase of 2.4G Wireless and e, Bandsteering will be disable.)	Nhập password cho
(Attention: if SSID1 Name, Authe 5G Wireless are all the same, Ba WPS Settings	(8~63 characters or 64 Hex ntication Type, Encryption Type and Se ndsteering function will work. Otherwis	string) ecurity Passphrase of 2.4G Wireless and e, Bandsteering will be disable.)	Nhập password cho
(Attention: if SSID1 Name, Authe 5G Wireless are all the same, Ba WPS Settings Use WPS	(8~63 characters or 64 Hex ntication Type, Encryption Type and Se ndsteering function will work. Otherwis	string) ecurity Passphrase of 2.4G Wireless and e, Bandsteering will be disable.)	Nhập password cho
(Attention: if SSID1 Name, Authe 5G Wireless are all the same, Ba WPS Settings Use WPS WPS State	(8~63 characters or 64 Hex ntication Type, Encryption Type and Se indisteering function will work. Otherwis © Enable © Disable Configured	string) ecurity Passphrase of 2.4G Wireless and e, Bandsteering will be disable.)	Nhập password cho
(Attention: if SSID1 Name, Authe 5G Wireless are all the same, Ba WPS Settings Use WPS WPS State WPS Progress	(8~63 characters or 64 Hex ntication Type, Encryption Type and Se indsteering function will work. Otherwis © Enable © Disable Configured Idle	string) ecurity Passphrase of 2.4G Wireless and e, Bandsteering will be disable.)	Nhập password cho
(Attention: if SSID1 Name, Authe 5G Wireless are all the same, Ba WPS Settings Use WPS WPS State WPS Progress WPS Mode	(8~63 characters or 64 Hex ntication Type, Encryption Type and Se ndsteering function will work. Otherwis © Enable © Disable Configured Idle PBC ▼	string) ecurity Passphrase of 2.4G Wireless and e, Bandsteering will be disable.) Cấu hình mặt định	Nhập password cho
(Attention: if SSID1 Name, Authe 5G Wireless are all the same, Ba WPS Settings Use WPS WPS State WPS Progress WPS Mode Click "Start WPS" to start w	(8~63 characters or 64 Hex ntication Type, Encryption Type and Se ndsteering function will work. Otherwis © Enable © Disable Configured Idle PBC • wps or click "Stop WPS" to stop	string) ecurity Passphrase of 2.4G Wireless and e, Bandsteering will be disable.) Cău hinh mặt định	Nhập password cho
(Attention: if SSID1 Name, Authe 5G Wireless are all the same, Ba WPS Settings Use WPS WPS State WPS Progress WPS Mode Click "Start WPS" to start w Start WPS	(8~63 characters or 64 Hex ntication Type, Encryption Type and Se ndsteering function will work. Otherwis © Enable © Disable Configured Idle PBC ▼ wps or click "Stop WPS" to stop	string) ecurity Passphrase of 2.4G Wireless and e, Bandsteering will be disable.) Cấu hình mặt định	Nhập password cho
(Attention: if SSID1 Name, Authe 5G Wireless are all the same, Ba WPS Settings Use WPS WPS State WPS Progress WPS Mode Click "Start WPS" to start w Start WPS	(8~63 characters or 64 Hex ntication Type, Encryption Type and Sk ndsteering function will work. Otherwis © Enable © Disable Configured Idle PBC ▼ wps or click "Stop WPS" to stop	string) ecurity Passphrase of 2.4G Wireless and e, Bandsteering will be disable.) Cău hinh mặt định	Nhập password cho
(Attention: if SSID1 Name, Authe 5G Wireless are all the same, Ba WPS Settings Use WPS WPS State WPS Progress WPS Mode Click "Start WPS" to start w Start WPS Set MAC access control st	(8~63 characters or 64 Hex ntication Type, Encryption Type and Se ndsteering function will work. Otherwis © Enable © Disable Configured Idle PBC • wps or click "Stop WPS" to stop	string) ecurity Passphrase of 2.4G Wireless and e, Bandsteering will be disable.) Cấu hình mặt định	Nhập password cho