Hướng dẫn đổi tên Wifi modem Hub N300M

Thao tác đổi tên wifi dễ dàng và đơn giản hơn khi sử dụng ứng dụng Hi FPT. Chi tiết

1. Đăng nhập vào modem:

Mở trình duyệt web (Chrome, Firefox, ...), nhập địa chỉ mặc định của modem: <u>http://192.168.1.1</u>

Account mặc định: xem dưới đáy modem hoặc gọi lên tổng đài FPT Telecom



2. Đổi tên Wifi.

Lựa chọn Network → Wireless LAN như hình.

- Đổi tên Wifi ở ô SSID
 Sau đó chon Apply để
 - Sau đó chọn **Apply** để lưu thay đổi.

	Network > Wireless LAN > General	
Status		Wireless Advanced Setup
Status Internet Hub N300M Network 1 WAN LAN Wireless LAN QoS Wireless WAN Usb Services Advanced Security Maintenance	Security Mode Wireless LAN > General General WPS WPS Station Status Wireless Setup Status Status Wireless Setup Status Status Øreless Setup Status Status Øreless Setup Øreless LAN SSID Index Select SSID I マ Enable Øreless SID Øreless SID Øreless SID Guest SSID Øreless SID Øreless SID Øreless SID WMM Enable Øreless Station Number 32 Station Threshold IS Guard Interval Øreless Short GI @ Long GI Security Mode WPA2-PSK ∨ Chef dot	Wireless Advanced Setup Channel Selection Auto Power Level High 802.11 Mode 802.11 B/G/N ··· Channel Width Auto Wireless YPU Enable Country USA If you set mode to 802.11 N mixed mode, the max transmit rate will be limit at 54Mbps when security is not WPA2-AES. Apply Cancel Cài đặt chuyên sâu
	WPA Compatible	Mật khẩu Wifi ④
	Pre-Shared Key	LClick here to display
	Group Key Update Enable Disable	
	NOTE : The total number of max station (shared by all S: The SSID can only input digits, letters . dash(-) a	SIDs) this device can support: 64 and under line()
		Apply Cancel Advanced